

WINDOW OPERATION GUIDE

For step-by-step video tutorials, please visit the [Champion Windows & Home Exteriors YouTube channel](#).



OPERATING CASEMENT WINDOWS

Casement windows are hinged on the side and crank open outward to the left or right allowing for full ventilation. This page will take you through 4 easy steps on how to operate your casement window.



Step 1

Locate the lock on the side of the window frame and push the latch upwards to unlock the window.



Step 2

At the bottom of the window, pull the crank out of the pocket and rotate the crank until the window is open.



Step 3

To close the window, turn the crank in the opposite direction until the window is closed and place the crank back into the pocket.



Step 4

Pull the latch downward to lock the window.