

GUIDE: REPLACING A SCREEN

For step-by-step video tutorials, please visit the [Champion Windows & Home Exteriors YouTube channel](#).

X REMOVING FLEXSCREENS® FROM A WINDOW

Note: Do not lean against screens, they do not act as safety barriers.



Step 1

Open the window so you can reach the screen. On a double-hung window, we recommend opening the top sash. Gently press the palm of your hand against the middle of the screen so the sides begin to flex inward.



Step 2

Grasp both sides of the screen, flexing it inward and lifting the bottom corners out of the track. Continue to compress the sides of the screen and remove it through the window opening.



Step 3

To re-install the FlexScreen®, grasp the longest sides of the screen and flex it inward 4-6 inches so it can be fed through the window opening.



Step 4

Guide the bottom corners into the track and then guide in the top corners. Release the sides of the screen into the side tracks. You can now close your window.